




## Programming the 24 Hour Digital Timer with 1 Minute Intervals

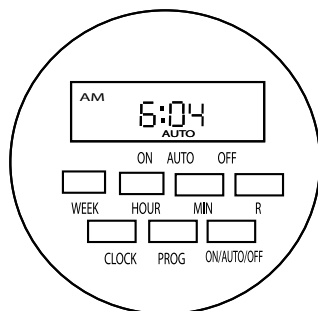

The 24 hour digital timer with 1 minute intervals will display the current time when operating. It will control eight (8) separate timing programs. There are many combinations of timing available to the user. Such as: hourly, daily, or weekly settings. NOTE: We recommend that you plug in your timer in for approximately 3 hours before programming to charge internal battery.

The timer will activate and deactivate the cabinet based on your programmed days and times. The selected programs will remain the same each day unless modified. The battery back-up system will protect your settings should you have a power outage. Keep timer away from spray or pesticides.

### Instructions for Operation

#### 1. To set present time:

- a. Press 'CLOCK' and 'HOUR' at the same time for setting the, 'HOUR'.
- b. Press 'CLOCK' and 'MINUTE' at the same time for setting the, 'MINUTE'.
- c. Press 'CLOCK' and 'WEEK' at the same time for setting the, 'WEEK'.

#### 2. To program:

- a. Press 'PROG' to enter into the programming mode. The display will show '1 ON'
- b. Press 'HOUR', 'MIN' & 'WEEK' to set the hour, minute and day of the week to activate your equipment.
- c. Press 'PROG' again for setting the off time. The display will show '1 OFF'.
- d. Repeat (b) above for the off time to deactivate your equipment.
- e. Press 'PROG' again to enter into the second timed program, '2 ON', etc.
- f. Repeat (a) through (d) to continue setting programmed times.

*Note: Press 'R' for canceling the time setting. Press 'R' again to resume previous time setting.*

### 3. Combination Weekly Settings:

- a. To program weekly settings press 'WEEK' once.  
Displays: Mo, Tu, We, Th, Fr, Sa, Su. Now the timer is on the daily on/off program.
- b. Press 'WEEK' again. Now each week day will display on the timer. Set the desired day of the week that you'd like the timer to activate and deactivate. Your timer will only activate on that day of the week.
- c. Press 'WEEK' again and the display shows: Mo, Tu, We, Th, Fr.  
The timer allows you to set the program for each weekend day.
- d. Press 'WEEK' again and the display shows: Sa, Su.  
The timer allows you to set the program for each weekend day.
- e. Press 'WEEK' again and the display shows: Mo, Tu, We, Th, Fr, Sa.  
The timer allows you to set the program for every day EXCEPT Sunday.
- f. Press 'WEEK' again and the display shows: Mo, Tu, Fr.  
The timer allows you to set the program for Monday, Wednesday and Friday.
- g. Press 'WEEK' again and the display shows: Tu, Th, Sa.  
The timer allows you to set the program for Tuesday, Thursday and Saturday.
- h. Press 'WEEK' again and the display shows: Mo, Tu, We.  
The timer allows you to set the program for Monday, Tuesday and Wednesday.
- i. Press 'WEEK' again and the display shows: Th, Fr, Sa.  
The timer allows you to set the program for Thursday, Friday and Saturday.
- j. Press 'WEEK' again and the display shows no days of the week.  
The timer allows you to set the program for Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday.

*Note: Press 'R' for canceling the weekday setting. Press 'R' again to resume previous weekday setting.*

### 4. Turning the timer ON & OFF or to use AUTOMATICALLY:

- a. Press 'ON/AUTO/OFF'. The display will show what mode you are in at the time.
- b. Press 'ON' and the timer will be on at all times.
- c. Press 'AUTO' and the timer will switch on & off based on your programmed times.
- d. Press 'OFF' and the timer will be off at all times.



**FOOD WARMING EQUIPMENT COMPANY, INC.**

5599 HWY. 31 W. Portland, TN 37148  
800.222.4393 | 815.459.7500 | Fax: 815.459.7989  
www.FWE.com | sales@fwe.com

COOK | HOLD | TRANSPORT | SERVE | REFRIGERATION | BARS

